


JINS MEME

取扱説明書 [スタートガイド]

型番: CNPME20S001AA / CNPME19A001AA

JINS MEMEをご使用になる前に、必ず本書の内容をご確認ください。

1. 各部の名称

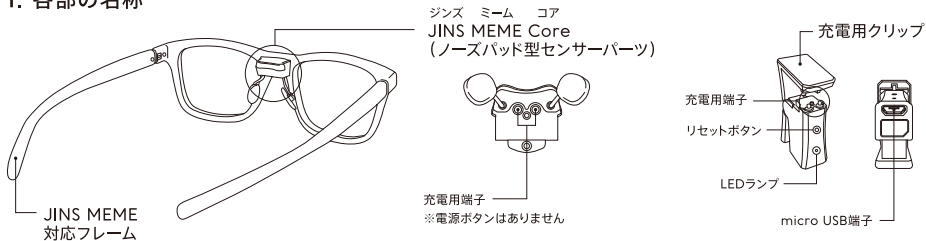

2-1. 充電時間と充電方法


ご購入後はじめてご使用になる前に、必ずJINS MEME Coreの充電をしてください。
初回の充電を行うことでJINS MEME Coreがスマートフォンと接続できる状態になります。

充電時間※1: 約3時間

充電方法

1. micro USBケーブル (別売) を充電用クリップのmicro USB端子に差し込みます。
2. JINS MEME Coreの充電端子部分と充電用クリップの充電端子部分が合うように、JINS MEME Coreへ充電用クリップを取り付けます。
3. micro USBケーブルのプラグをACアダプタ (別売) と接続するか、直接パソコンのUSB端子と接続します。
4. LEDランプが点灯し、充電が開始されます。LEDランプが消灯したら充電完了です。

※1 室温約25°Cにおける充電時間の目安を示しています。電池の残量や充電環境によって充電時間は変わります。

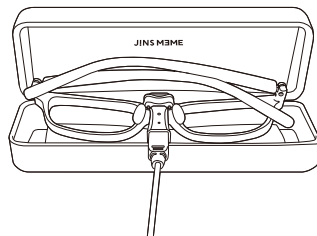

2-2. 使用時間とモードの切り替え方法

JINS MEME Coreの使用時間の目安は以下の通りです。

アクティブモード (連続使用時間): 最大24時間※1

スリープモード (待機状態): 約2週間

※1 ジャイロセンサー使用時は約11時間

アクティブモードとスリープモードの切り替えは、
JINS MEMEの上下の向きを変えることで行います。



アクティブモード: 本体を上向き
(メガネをかけている状態と同じ向き)



スリープモード: 本体を下向き
(メガネをかけている状態と逆向き)

3. 初期設定

初期設定を行う前に、2-1に記載の充電方法に従って必ずJINS MEME Coreの充電を行ってください。

[STEP 1]

JINS MEMEアプリをインストールする

お使いの機種のアプリストアから、「JINS MEME」アプリをスマートフォン端末へインストールします。

  ※2021年内に配信予定

[STEP 2]

スマートフォンのBluetoothをONにする

スマートフォンのBluetooth通信をONにします。
不明点は、スマートフォンの取扱説明書を参照してください。

[STEP 3]

新規アカウント登録を行う

JINS MEME アプリを起動し、新規アカウント登録を行います。
既にJINSアカウントもしくはJINS MEMEアカウントをお持ちの方は、
同じアカウントでログインが可能です。

[STEP 4]

スマートフォンとJINS MEME Coreの 接続設定を行う

アプリの画面表示に従って、スマートフォンと
JINS MEME Coreの接続設定を行ってください。
※設定を行う際には、スマートフォンとJINS MEME Coreを1m以内の
距離に置いてください。一度設定が完了すれば、次回以降は自動的に接続されます。

●取り扱い方法の詳細

初期設定方法や使用上の注意については、JINS MEMEウェブサイトからもご確認いただけます。

4. JINS MEMEの保証について

- 保証対象: JINS MEME Core*1*2 ※充電用クリップ等の付属品は保証対象外*3
- 保証期間: お渡し日より1年間

保証内容: 取扱説明書(スタートガイド)等に記載する当社の定めた使用方法に従った使用において故障した場合には、代替品と無償交換をいたします。
ただし、下記の場合には、保証期間内でも無償交換は承れません。

- 1) 通常の使用による摩耗や損傷の場合
- 2) 誤使用、保管上の不備等お客様の故意・過失(水没、落下など)・不注意による故障や損傷の場合
- 3) 当社以外の者による修理や改造による故障や損傷の場合
- 4) 接続する他の製品によって生じた故障や損傷の場合
- 5) 火災、地震、水害、公害その他天災地変による故障や損傷の場合
- 6) 電源の電圧や電圧環境の変動などの予測不能な環境変化による故障や損傷の場合
- 7) 保証書の提示がない場合
- 8) お渡し日、ご購入店などの保証書の記載に不備があった場合、または字句を書き換えられた場合

- 保証書およびお買い上げレシートの再発行はいたしませんので、大切に保管してください。
- JINS MEME Core、JINS MEME対応フレームおよびレンズの保証は、JINS MEME取扱い店舗のみで行っております。
- JINS MEME取扱い店舗等にJINS MEMEを持参いただくに際しての諸費用は、お客様にご負担願います。
- その他の情報は、JINS MEMEのサポートページをご覧ください。

- *1 JINS MEME Coreのバッテリーは内蔵型のため、バッテリーのみの交換・修理はお受けできません。
- *2 JINS MEME対応フレームおよびレンズの保証内容に関しては、ご購入時にお渡しする保証書をご参照ください。
- *3 お渡し日より2週間以内に、充電用クリップ等の付属品について不具合があった際は、ご購入店舗に当該付属品とお買い上げレシートをご提示ください。
無償にて代替品と交換させていただきます。お買い上げレシートのご提示が無い場合は、期間内であっても無償交換は承れません。


JINS MEME

Instruction Manual [Quick Guide]

Model No. : CNPME20S001AA / CNPME19A001AA

Be sure to read this manual before using JINS MEME.

1. Names of parts

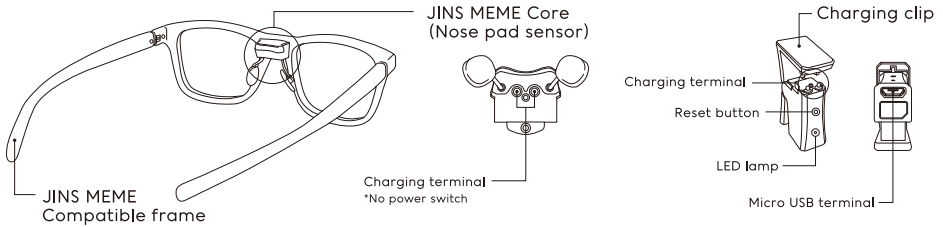

2-1. Charging time and charging method


Before you first use JINS MEME Core, be sure to charge the battery. Once you charge JINS MEME Core for the first time, it becomes ready to connect to your smartphone.

Charging time*1: approx. 3 hours

Charging method

1. Fit the micro USB cable (sold separately) into the micro USB terminal in the charging clip.
2. Attach the charging clip to JINS MEME Core so that the JINS MEME Core charging terminal and the charging clip terminal match.
3. Connect the micro USB cable plug to an AC adapter (sold separately), or connect it directly to a PC USB terminal.
4. When the LED lamp comes ON, charging starts. When the LED lamp goes OFF, charging is finished.

*1 The charging time shown is an estimate based on a room temperature of about 25°C. The actual charging time will depend on the battery level and charging conditions.

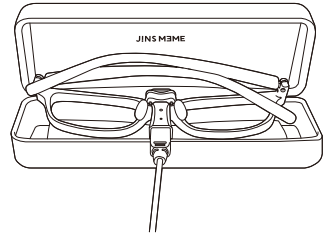

2-2. Usage time and how to switch modes

The estimated usage times of JINS MEME Core are as follows:

Active mode (continuous usage): max. 24 hours*1

Sleep mode (standby): approx. 2 weeks

*1 The usage time of the gyro-sensors is approximately 11 hours.

To switch between the active mode and the sleep mode, change the up/down orientation of JINS MEME.



Active mode: Unit facing upwards
(same orientation as when wearing glasses)



Sleep mode: Unit facing downwards
(opposite orientation to when wearing glasses)

3. Initial settings

Before making the initial settings,
be sure to charge the JINS MEME Core battery according to the charging method instructions in 2-1.

[STEP 1]

Install the JINS MEME app.

Install the JINS MEME app onto your smartphone
from the application store of the model you are using.



*Due to be released in 2021.

[STEP 2]

Turn ON your smartphone's Bluetooth.

Turn ON your smartphone's Bluetooth.
Refer to the instruction manual of your smartphone for details.

[STEP 3]

Open a new account on the JINS MEME app.

Start up the JINS MEME app and open a new account.
If you already have a JINS account or a JINS MEME account,
you can log in from that account.

[STEP 4]

Program your smartphone and JINS MEME Core settings.

Follow the instructions on the app screen to
connect your smartphone with JINS MEME Core.

*When setting up the connection, make sure that your
smartphone and JINS MEME Core are at least within 1m of each other.
Once you have completed the setup, the connection will be
made automatically from then on.

●Details on handling

For details on initial settings and precautions when using the device, please refer to the JINS MEME website.

4. JINS MEME warranty

- Warranty for: JINS MEME Core*1*2 *Charging clips and other accessories are not covered by the warranty*3.
- Warranty period: One year from the date of receipt

Warranty details:If a failure occurs while the device is being used in accordance with the instruction manual (Quick Guide) or other instructions provided by our company, a replacement will be provided free of charge.

Please note, however, that a free replacement will not be provided if any of the following applies, even during the warranty period.

- 1) Wear and tear or damage due to normal usage.
- 2) Failure or damage arising from the customer's misuse or insufficient storage, or other willful intent, negligence (submersion in water, dropping, etc.), or carelessness.
- 3) Failure or damage due to repairs or modification carried out by persons other than our company's engineers.
- 4) Failure or damage caused by other connected products.
- 5) Failure or damage due to fire, earthquake, flood, pollution, or other natural disasters.
- 6) Failure or damage due to unpredictable environmental changes, such as fluctuations in the power supply voltage or the radio wave environment.
- 7) Replacement request without submitting the warranty card.
- 8) Submission of the warranty card, in which information on where and when you received the product has not been entered, or in which such entries have been altered.

- Warranty cards and purchase receipts cannot be re-issued, so please keep them in a safe place.
- Warranty services for JINS MEME Core and JINS MEME compatible frames and lenses are provided only at stores handling JINS MEME.
- Any costs involved in bringing JINS MEME to a JINS MEME store are to be borne by the customer.
- For other information, please visit the JINS MEME support page.

- *1 The JINS MEME Core battery is built-in, so devices cannot be accepted for battery replacement or repair only.
- *2 For details of the warranty on JINS MEME compatible frames and lenses, please refer to the warranty card provided at the time of purchase.
- *3 If you experience a problem with the charging clip or other accessories within two weeks of the date of receipt, please take the accessories to the store where you purchased them, along with the purchase receipt.
A replacement will be provided free of charge. Please note that a free replacement will not be provided without a purchase receipt, even within the two-week period.